


تنظیمات وایرلس مودم B636

برای تغییر رمز وای فای مودم B636 ، مراحل زیر را دنبال کنید:

برای ورود به کنسول مودم (192.168.1.1) username و password شما کلمه admin می باشد .

- در صورتی که با کلمه admin وارد نشدید میتوانید پسورد پیش فرض Wifi را برای ورود امتحان نمایید .
- منو Setting / WLAN / WLAN Basic Setting را انتخاب نمایید .
- در جدولی که مشاهده می نمایید با کلیک بر روی علامت ! صفحه ویرایش هر کدام اسامی وای فای برای شما باز میشود .
- SSID نام وای فای و WIFI password پسورد اتصال به وای فای می باشد .
- بعد از انتخاب نام و پسورد روی کلمه Apply یا Save کلیک نموده تا تغییرات انجام شده ذخیره شود.
- تنظیمات 5G SSID نیز در این صفحه امکانپذیر می باشد.

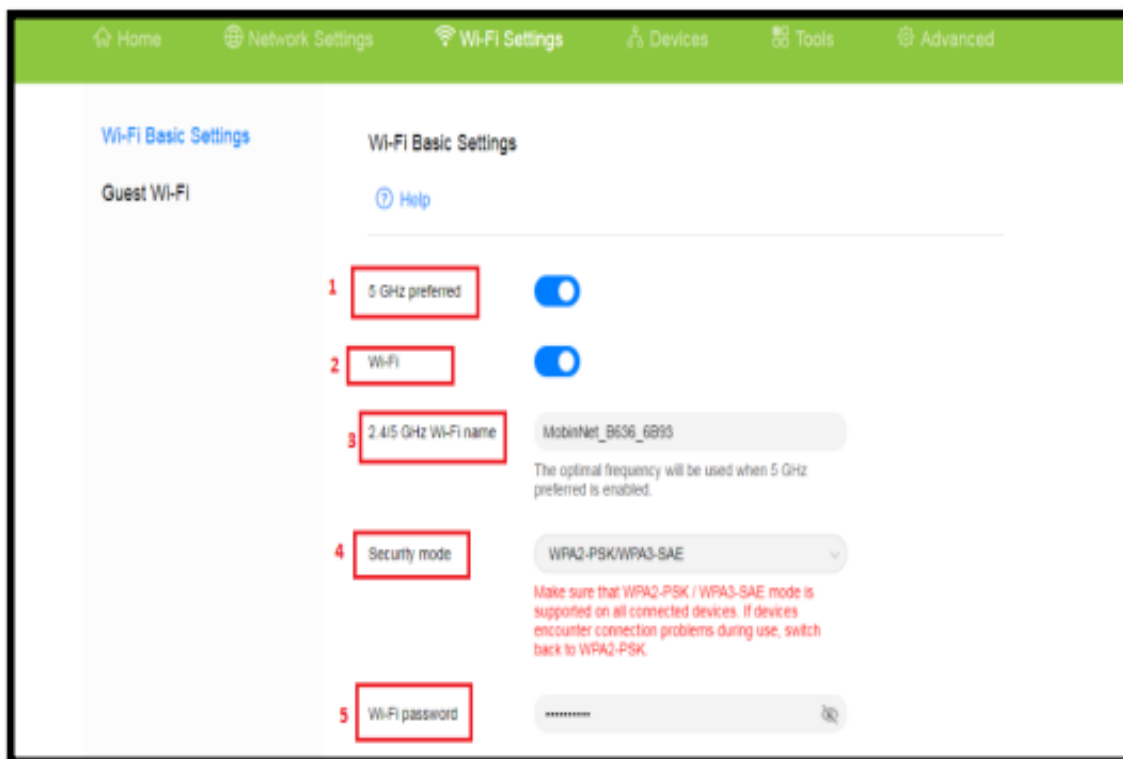

Security mode

WPA2-PSK/WPA3-SAE

Make sure that WPA2-PSK / WPA3-SAE mode is supported on all connected devices. If devices encounter connection problems during use, switch back to WPA2-PSK.

Wi-Fi password

5 GHz Wi-Fi name

MobinNet_B636_6893_5G

Connect to this Wi-Fi to use 5 GHz Wi-Fi only.

Security mode

WPA2-PSK/WPA3-SAE

Make sure that WPA2-PSK / WPA3-SAE mode is supported on all connected devices. If devices encounter connection problems during use, switch back to WPA2-PSK.

Wi-Fi password

Save

More Wi-Fi Settings